

Smart Kit SMK/N - SMK/3012 - SMK/3111 Audiokit



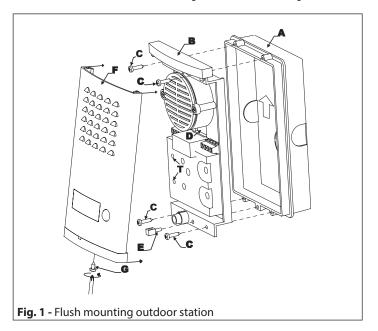

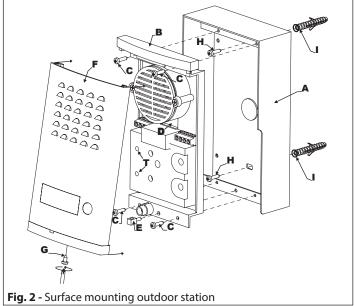

OUTDOOR STATION MOUNTING INSTRUCTIONS

FLUSH MOUNTING OUTDOOR STATION ART. SMK-1 SMK-2 (FIG. 1)

- Fix the intercom to the wall by using the two expansion type screws provided;
- Fix the transformer on a DIN bar or directly to the wall by using the two expansion type screws provided;
- Remove front plate (F) and PCB holder (B);
- Mount the back box (A) at the designated height, ensuring the arrow is pointing to the top, with the cables threaded through it. Ensure that all fixing holes are cleanly and accurately finished;
- Thread the cables through the relevant opening (D) of the PCB holder (B) then fix it to back box (A) by using the 4 screws (C) provided;
- Carry out connections accurately using wiring diagram provided;
- Switch power on and check system is working correctly: speech and door opening, after making a call from the outdoor station which is confirmed by a tone from the outdoor station loudspeaker. The audio amplifiers are pre-adjusted for a good level of speech, however, if required, it is possible to adjust **EXTVOLUME** and **INTVOLUME** by altering the trimmers **(T)** to avoid the Larsen effect (feedback) when front plate **(F)** has been mounted;
- Screw the fixing nut **(E)** leaving the hole in a vertical position and then fit the front plate **(F)** in the upper part of PCB holder **(B)** and fix the lower part by using the screw **(G)**.

SURFACE MOUNTING OUTDOOR STATION ART. SMK-1S SMK-2S (FIG. 2)

Follow instructions above changing the fourth point as follow:

• Fix the surface mounting box (A) to the wall by using the 2 expansion screws provided (H).

Note: To reset the thermal fuse in the transformer after a short circuit or other fault, switch off the power to the transformer and remove the source of the short circuit. Restore power after approximately 60 seconds and check for correct output voltage.

CONNECTION TO MAINS AND POWER SUPPLY MOUNTING INSTRUCTIONS

The system must be installed according to national rules in force, in particular we recommend to:


- Connect the system to the mains through an **all-pole circuit breaker** which shall have contact separation of at least 3mm in each pole and shall disconnect all poles simultaneously;
- The all-pole circuit breaker shall be placed for easy access and the switch shall remain readily operable.

POWER SUPPLY INSTALLATION

- Remove the terminal side covers by unscrewing the retaining screws;
- Fix the power supply to a DIN bar or directly to the wall using two expansion type screws;
- Switch off the mains using the circuit breaker mentioned above and then make the connections as shown on the installation diagrams;
- Check the connections and secure the wires into the terminals;
- · Replace the terminal covers and fix them using the relevant screws;
- When all connections are made, restore the mains.

Smart Kit SMK/N - SMK/3012 - SMK/3111 Audiokit



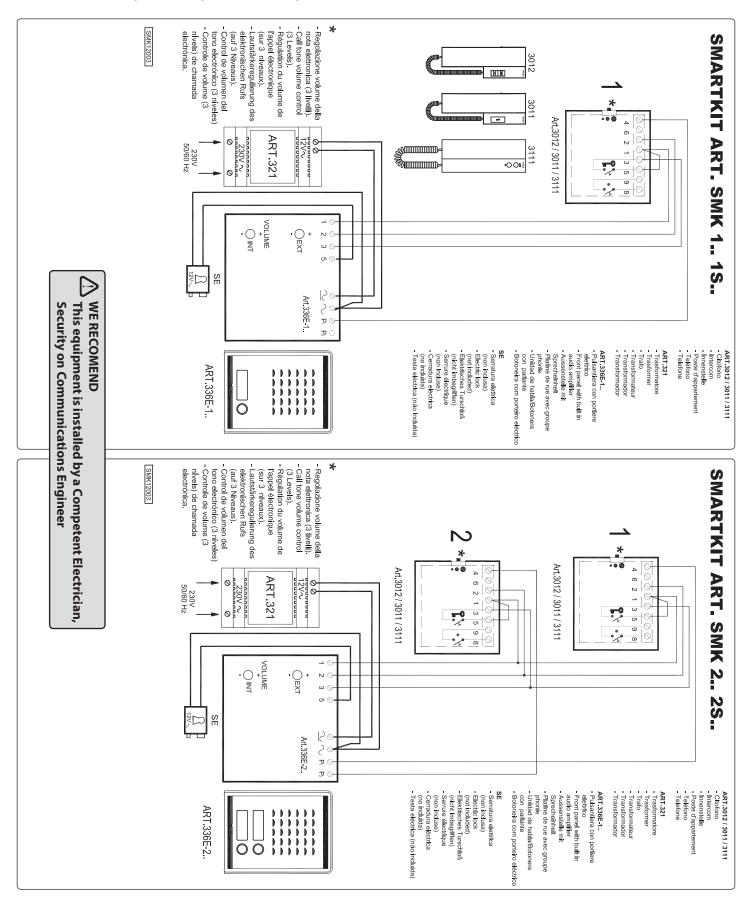

Smart Series Audiokit

Wiring Guide Line



All intercoms wiring must run separately from the mains cable.

The cable type should be CW1308 or an equivalent cable. The cable size should comply with the table below.

DISTANCE METERS	CABLE SIZE (MM²)
50	0.35
100	0.5
200	0.75
300	1.0
400	1.5

Max resistance of all lines: 8 Ohm

Before powering the system up, the wiring should be double checked to ensure it complies with the wiring diagram supplied.

TROUBLE SHOOTING GUIDE

In the event of the system not functioning correctly when you power up, the following points can be checked (a multimeter will be needed).

SYSTEM DEAD

- Check mains input to the transformer.
- Check the 12Vdc (+12 terminal) output from the power supply.
- · Check fuses.
- Check for shorts on power supply wires.

SPEECH & LOCK WORKS BUT NO ELECTRONIC CALL TONE

- Check the link between "C" and "C1" terminals of the speaker unit.
- Call wire to terminal "4" of the handset broken on in short circuit; check the walk of the call wire.

NO SPEECH FROM THE DOOR PANEL

- Check and/or adjust the volume operating on trimmers controls on rear of speaker unit.
- Check the wire from terminal "2" of the speaker unit to terminal "2" of the handset.

NO SPEECH FROM THE HANDSET

- Check and/or adjust the volume operating on trimmers controls on rear of speaker unit.
- Check the wire from terminal "1" of the speaker unit to terminal "1" of the handset.

LOCK DOES NOT WORK

- Check on the handset the link between terminals "1" and "5".
- Check the 13Vac output on the transformer.
- Check the wires of the electric lock.
- Wires section not in conformity with the table above.

FEEDBACK PROBLEM (LARSEN EFFECT)

- Check that the handset microphone is firmly fitted inside its housing.
- Check that the speaker unit microphone is firmly fitted inside its housing and nothing is obstructing the microphone hole.
- Adjust the volume operating on trimmer controls on rear of the speaker unit.

HUM ON THE SPEECH LINES

- Check that system cables are not running close to any high voltage or mains cables.
- Check that the system is wired exactly as shown on the wiring diagram.

^

WE RECOMMEND THIS EQUIPMENT IS INSTALLED BY A COMPETENT ELECTRICIAN, SECURITY OR COMMUNICATIONS ENGINEER.

If further assistance is required, call the technical help desk on 0191-2243174 for uk customers or +39 0734631669 for other countries.







VIDEX ELECTRONICS S.P.A.

Via del Lavoro, 1 - 63846 Monte Giberto (FM) Italy Tel (+39) 0734 631669 - Fax (+39) 0734 632475 www.videx.it - info@videx.it

Main UK office:

VIDEX SECURITY LTD

1 Osprey Trinity Park Trinity Way LONDON E4 8TD

Phone: (+44) 0870 300 1240 Fax: (+44) 020 8523 5825 www.videx-security.com marketing@videx-security.com

Greece office:

VIDEX HELLAS Electronics

48 Filolaou Str. 11633 ATHENS

Phone: (+30) 210 7521028

(+30) 210 7521998

Fax: (+30) 210 7560712 www.videx.gr videx@videx.gr

Northern UK office:

VIDEX SECURITY LTD

Unit 4-7

Chillingham Industrial Estate

Chapman Street

NEWCASTLE UPON TYNE - NE6 2XX Tech Line: (+44) 0191 224 3174 Phone: (+44) 0870 300 1240

Fax: (+44) 0191 224 1559

Danish office:

VIDEX DANMARK

Hammershusgade 15 DK-2100 COPENHAGEN Phone: (+45) 39 29 80 00 Fax: (+45) 39 27 77 75 www.videx.dk videx@videx.dk

Benelux office:

VIDEX BENELUX

E3 laan, 93 B-9800 DEINZE Phone: (+32) 9 380 40 20 Fax: (+32) 9 380 40 25 www.videxbenelux.be

info@videxbenelux.be

COSTUMER SUPPORT



All Countries:

VIDEX ELECTRONICS S.P.A.

www.videx.it - technical@videx.it Tel: +39 0734-631669 Fax: +39 0734-632475 UK Customers: VIDEX SECURITY LTD www.videx-security.com Tech Line: 0191 224 3174 Fax: 0191 224 1559

